


[illegible]

[illegible]

4 POSITION FUNCTION SELECTOR SWITCH – WITH PUSH BUTTON EMERGENCY BATTERY OPEN

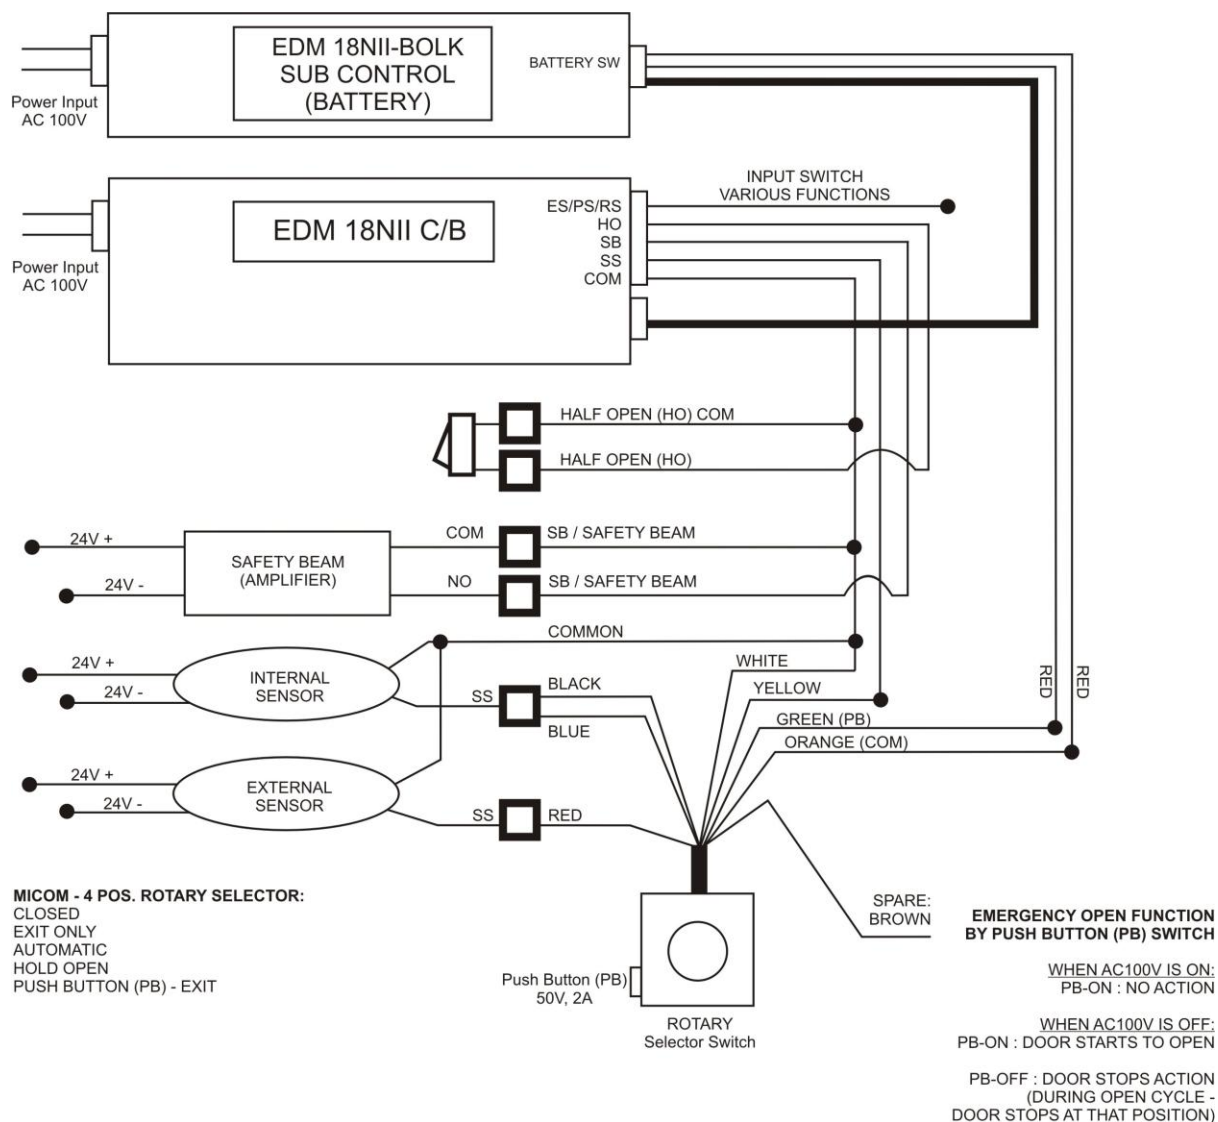

3. 4 POSITION FUNCTION SELECTOR SWITCH – WITH PUSH BUTTON BATTERY OPEN (ONE SHOT)

